 
 
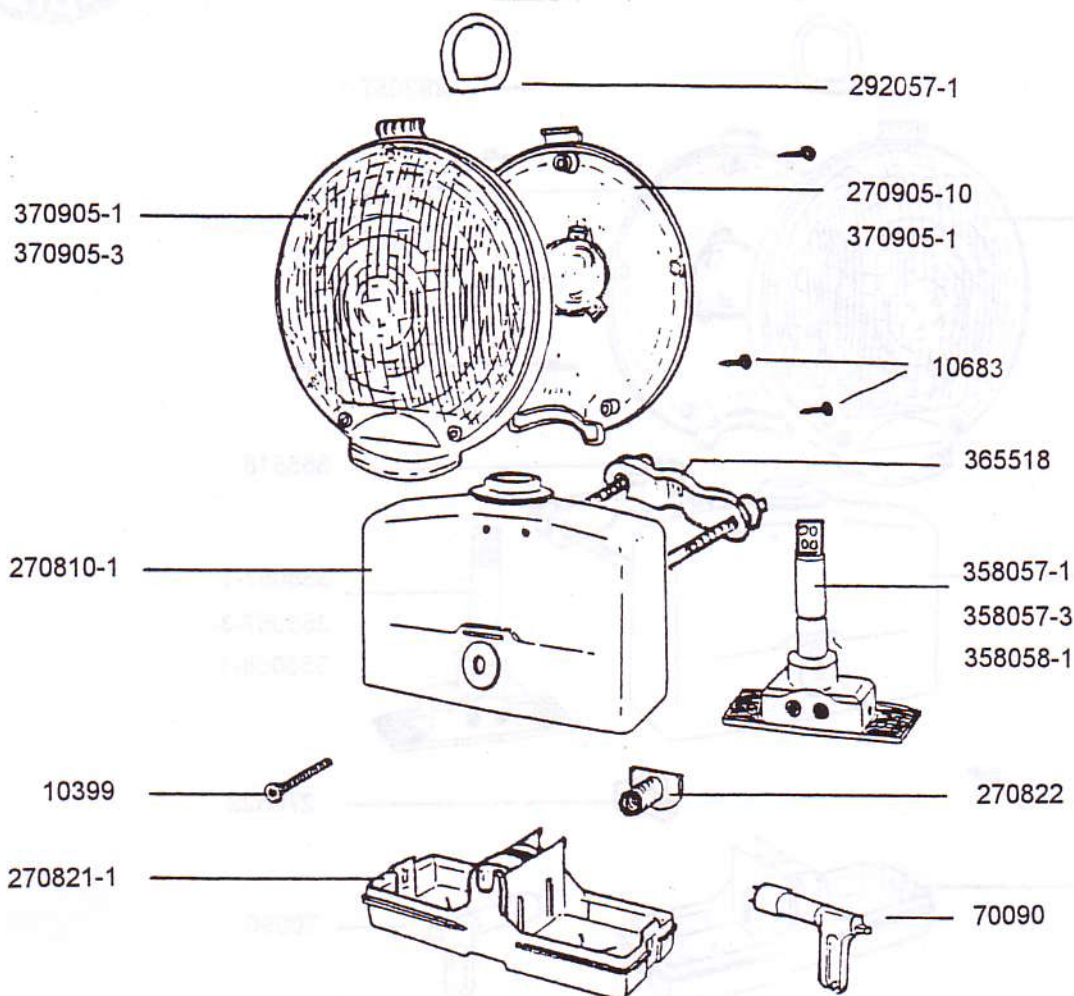 
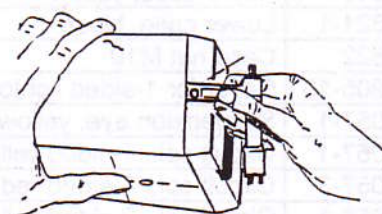 
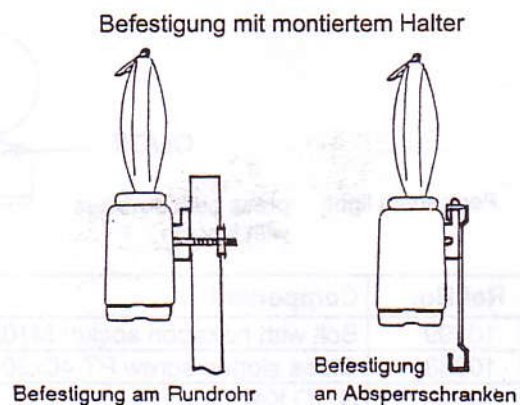 


| Bestell Nr. | Bezeichnung                                                             |
|-------------|-------------------------------------------------------------------------|
| 10399       | Bolzen mit Innensechsk. M10x70                                          |
| 10683       | Kreuzschlitzschraube PT 40x30                                           |
| 70090       | NIKO-Schlüssel                                                          |
| 270810-1    | Gehäuse-Oberteil gelb                                                   |
| 270821-1    | Gehäuse-Unterteil schwarz                                               |
| 270822      | Spindelmutter M10                                                       |
| 270905-10   | Abdeckung für einseitigen Lichtaustritt                                 |
| 292057-1    | Hängeöse, gelb                                                          |
| 358057-1    | Geber kpl., 1-seitig gelb                                               |
| 358057-3    | Geber kpl., 1-seitig rot                                                |
| 358058-1    | Geber kpl., 2-seitig gelb                                               |
| 365518      | Halter zur Befestigung an senkrechten Rohren und abgekanteten Schranken |
| 370905-1    | Linsenhalbschale 200mm Ø, gelb                                          |
| 370905-3    | Linsenhalbschale 200mm Ø, rot                                           |


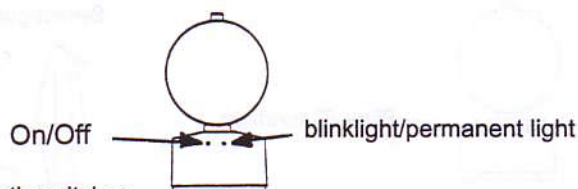


Zum Öffnen der Leuchte Schraubendreher in die Öffnung stecken und nach unten drücken.

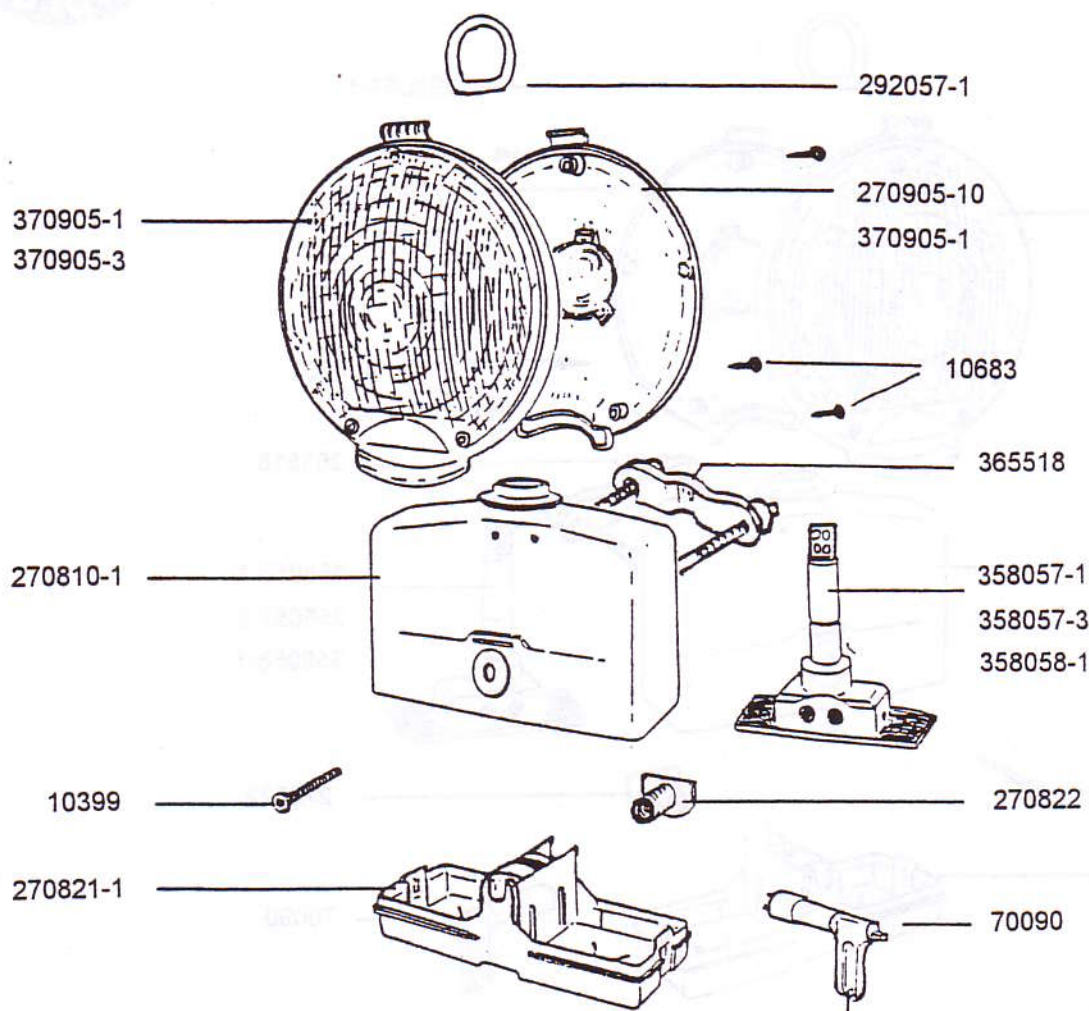

Permanent light: press both switches with key pin

| Ref.No.   | Component                                                             |
|-----------|-----------------------------------------------------------------------|
| 10399     | Bolt with hexagon socket M10x70                                       |
| 10683     | Cross slotted screw PT 40x30                                          |
| 70090     | NIKO Key                                                              |
| 270810-1  | Upper case, yellow                                                    |
| 270821-1  | Lower case, black                                                     |
| 270822    | Case nut M10                                                          |
| 270905-10 | Cover for 1-sided lightopening                                        |
| 292057-1  | Suspension eye, yellow                                                |
| 358057-1  | Circuit cpl., 1-sided yellow                                          |
| 358057-3  | Circuit cpl., 1-sided red                                             |
| 358058-1  | Circuit cpl., 2-sided yellow                                          |
| 365518    | NIKO-bracket for mounting on vertical round tubes and square barriers |
| 370905-1  | 1 half of the lens ø 200mm, amber                                     |
| 370905-3  | 1 half of the lens ø 200mm, red                                       |

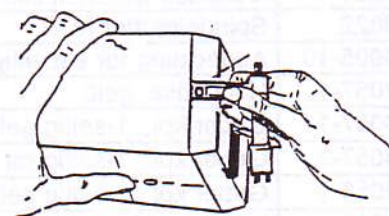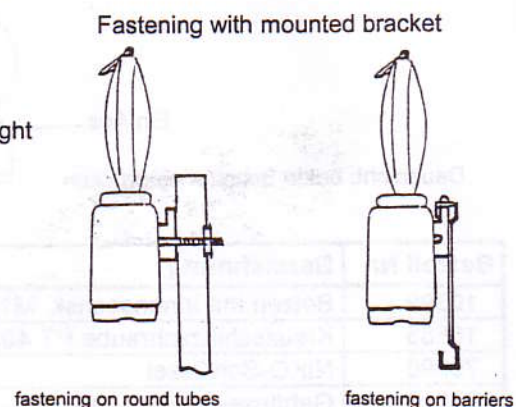

For opening the lamp put a screw driver into the opening and press down.